



# Talking Clock/ Thermometer with 199-Year Calendar



**Owner's Manual**  
Please read before using this equipment.

## **Contents**

<b>Features .....</b>	<b>3</b>
<b>Preparation .....</b>	<b>5</b>
Installing the Batteries .....	5
Setting the Time and Date .....	8
<b>Operation .....</b>	<b>11</b>
Announcing the Time and Temperature .....	11
Adjusting the Clock's Volume .....	11
Selecting the Alarm Sound .....	12
Using the Alarm .....	16
Using Snooze .....	20
Viewing the Calendar .....	21
<b>Care .....</b>	<b>22</b>
<b>Specifications .....</b>	<b>23</b>

© 2000 Tandy Corporation. All Rights Reserved.  
RadioShack and RadioShack.com are  
trademarks used by Tandy Corporation.

## **Features**

Your RadioShack Talking Alarm Clock/Thermometer combines an attractive design with advanced technology. It is ideal for your bedroom, kitchen, office, or in almost any room.

The clock's features include:

**Large Display** — the  $2\frac{5}{8}$ - $\times$   $1\frac{7}{8}$ -inch liquid crystal display makes it easy to read the hour, minute, year, month, day, date, and temperature.


**199-Year Calendar** — gives you the calendar from 1901 to 2099.




**Voice Announcements** — announces the time and temperature at the touch of a button.



**Daily Alarm and Three Calendar Alarms** — let you set alarms to sound daily or on a specific date and at times you set.

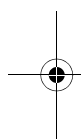

**Variety of Alarm Sounds** — lets you select from 15 melodies at three different pitches and tempos.

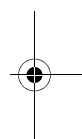

**Thermometer** — lets you see the indoor temperature (16° to 128°F).

## **Preparation**

### **INSTALLING THE BATTERIES**

Your clock requires two AA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.


#### **Cautions:**

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or


rechargeable batteries of different capacities.

Follow these steps to install the batteries.

1. Remove the battery compartment cover by pressing the cover's tab in the direction of the arrow and lifting the cover.

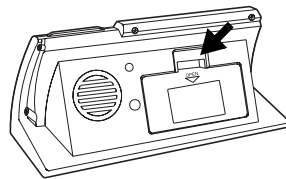

2. Insert two batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside. The indoor temperature, date/time, and calendar appear on the display.

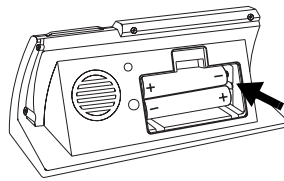

3. Replace the cover.

If the clock's sound weakens or the display dims, replace the batteries.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** If you do not plan to use the clock for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

## SETTING THE TIME AND DATE


### Notes:

- If you do not press a key for about 1 minute, the clock automatically returns to the current time/temperature display.
- If you enter a wrong setting, press **SET** to reset.





Follow these steps to set the correct time and date.

1. Repeatedly press **MODE** until you hear "Time set." **TIME** flashes on the display.

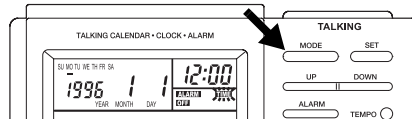


2. Press **SET** to set the hour. You hear "Hour set."
3. Repeatedly press (or hold down) **UP** or **DOWN** to select the hour.

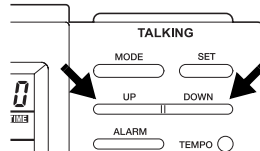



- 
4. Press **SET** to store the hour. You hear "Minute set."

5. Repeat Steps 1–4 to set the minutes, year, month, day, and date.

6. When you finish, press **MODE** once to complete the setting. The clock beeps four times and the display returns to the time/temperature.


- With the time/temperature displayed, press **MODE** to see the time/year display. The clock beeps and time/year display appears. To return to the time/temperature display, press **MUSIC** then **MODE**.






## **Operation**


### **ANNOUNCING THE TIME AND TEMPERATURE**

To hear the time or temperature, press **TALKING**. The clock chimes and announces the current time and temperature.

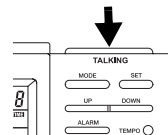



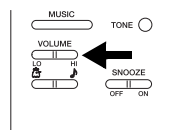

### **ADJUSTING THE CLOCK'S VOLUME**

Slide **VOLUME LO/Hi** toward **Hi** to increase the volume or **LO** to decrease the volume.



## SELECTING THE ALARM SOUND

You can set the clock to sound a rooster crow or one of 15 melodies when the alarm goes off. Slide the /  switch to  for a rooster crow, or to  for a melody.


There are 15 different melodies that you can either listen to or select as an alarm sound.

1. Interlude
2. A Comme Amour
3. L'herure Bleue
4. Romance De Amor
5. Casablanca
6. For Ellise
7. A Maiden's Prayer
8. Greensleeves


- 9. Ballade
- 10. Beautiful Dreamer
- 11. Love Story
- 12. Godfather
- 13. Tchaikovsky
- 14. A Time for Us
- 15. Dolly's Dreaming and Awakening

Follow these steps to select a melody as an alarm sound.


1. Slide   to .

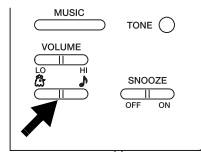

2. Press **MUSIC**. The clock beeps and the number of the melody last played appears under **MUSIC**.

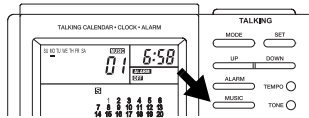

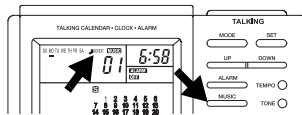

To listen to the same melody continuously, press **MUSIC** again so **REPEAT** appears.




**Note:** If **REPEAT** does not appear, the melodies will play in sequence.


3. Press **SET** then **UP** or **DOWN** to select the desired melody number.

- 
- 
4. Press **TALKING** to listen to the melody. To select another melody, press **UP** or **DOWN**. Press **ALARM** to stop playing the melody.

5. Press **MODE** to confirm your melody setting. The clock returns to the current time/temperature display.



To check the preset melody at any time, hold down **SET** when you are in the time/temperature display. The clock plays the melody. Release **SET** to stop the melody.



**Listening To The Melodies**

To listen to the melodies, follow Steps 1–4 in “Selecting the Alarm Sound” on Page 12.

#### Notes:

- To increase the playing speed, repeatedly press **TEMPO**. To increase the pitch, repeatedly press **TONE**.
- You can change the tempo or tone before you start the melody or while the melody is playing.

### USING THE ALARM

The clock has four alarm types.


**Alarm 1:** Sounds daily at a preset time.

**Alarms 2, 3, 4:** These are calendar alarms that can be set to sound on a specific date and time. They can also be set as daily alarms.



## Setting the Daily Alarm (Alarm 1)

Repeatedly press **MODE** until the clock announces “Alarm one set”. **ALARM 1** flashes.

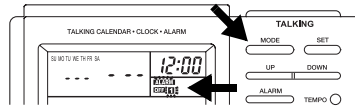

Follow the steps in “Setting the Time and Date” on Page 8 to set the desired alarm time.


At the time you set, the clock announces the alarm time. If you selected the rooster as the alarm sound, the alarm sounds for 1 minute, then turns off.

If you selected the melody as the alarm sound, the alarm automatically turns off when the melody is finished. To silence the alarm sooner, press **TALKING**.

To turn off the alarm so it does not sound the next day or reset the current alarm time, repeatedly press **MODE** until the desired daily or calendar alarm appears. Press **ALARM** to turn off the alarm, then repeatedly press **MODE** until the current time appears.

### Setting the Calendar Alarms (Alarms 2, 3, and 4)


Follow the same steps listed in "Setting the Daily Alarm (Alarm 1)" on Page 17 to set the calendar alarms except in Step 1, repeatedly press **MODE** until the desired alarm (2, 3, or 4) flashes.

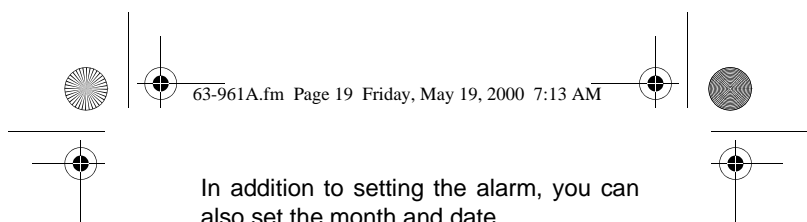

In addition to setting the alarm, you can also set the month and date.

After you set the alarm, press **ALARM** to turn on the alarm. The clock announces which alarm you have set. For example, if you set Alarm 2, the clock announces "Alarm 2 on."

To return to the time/temperature display, repeatedly press **MODE** until you see the display.

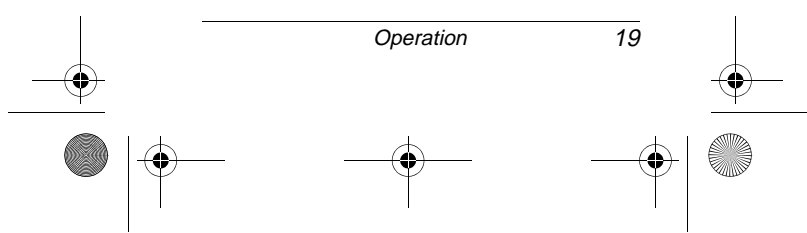

## Using Calendar Alarms as Daily Alarms


To set a calendar alarms as a daily alarm, follow the steps in "Setting the Calendar Alarms (Alarms 2, 3, and 4)" on Page 18 except in addition to setting the alarm time, you can specify the year, month, and date.

Simply press **UP** or **DOWN** to select the year, month and date after you set the time. --- appears to indicate that no date is set. Repeatedly press **MODE** to return to the date/time display.


## USING SNOOZE

To turn on snooze, slide **SNOOZE OFF/ON** to **ON** while setting the alarm time. **SNOOZE** appears. When the preset

alarm sounds, press **TALKING** to temporarily silence it. The alarm sounds twice every 4 minutes after the preset alarm. To turn off snooze, slide **SNOOZE OFF/ON** to **OFF**.

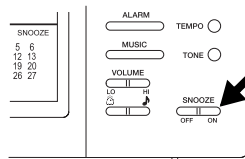

## VIEWING THE CALENDAR

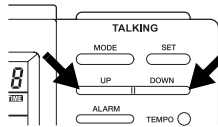

To scroll through the calendar one month at a time, repeatedly press **UP** or **DOWN**.

To return to the present year and month, press **MODE** once or wait 1 minute.

## **Care**

Keep the Talking Alarm Clock/Thermometer dry; if it gets wet, wipe it dry immediately. Use and store the thermometer only in normal temperature environments. Handle the thermometer carefully; do not drop it. Keep the thermometer away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the thermometer's internal components can cause a malfunction and invalidate its warranty. If your thermometer is not per-

forming as it should, take it to your local RadioShack store for assistance.

## **Specifications**

Power ..... Two AA Batteries  
 Clock Accuracy .....  $\pm 0.67$   
 Operating Temperature ..... 16°F to 128°F  
 (–9°C to 54°C)  
 Dimensions (HWD) ....  $3 \frac{9}{16} \times 5 \frac{29}{32} \times 2 \frac{5}{8}$  in  
 (90 × 150 × 67 mm)  
 Weight (without batteries) ..... 6.1 oz  
 (173 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

### Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor,  
Fort Worth, TX 76102

*We Service What We Sell*

12/99

05A00

63-961 

Printed in China